

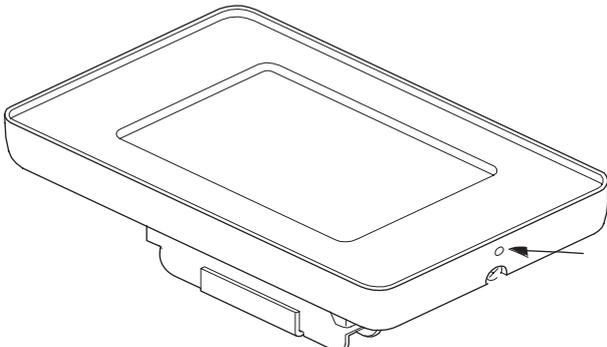
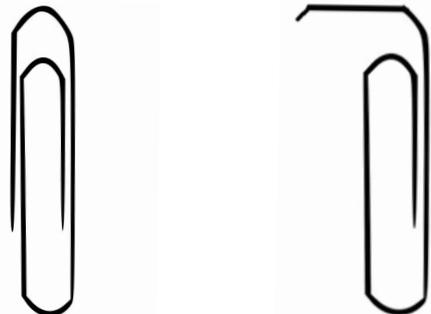
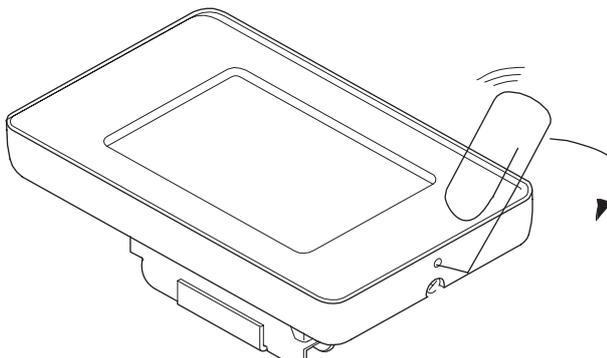
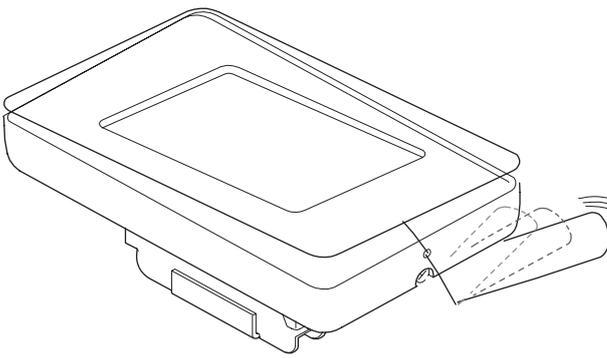
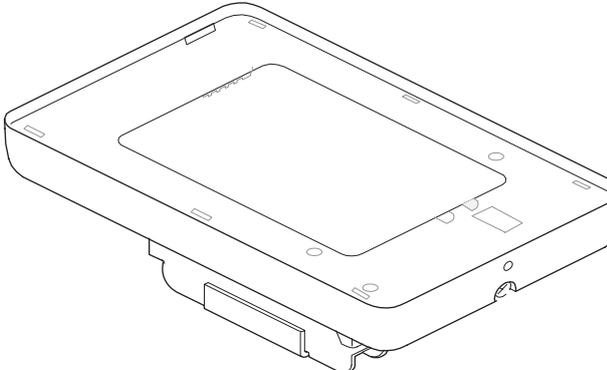
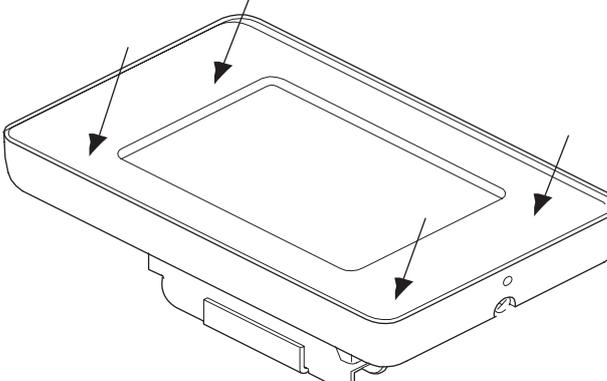
# INSTRUCTIONS

## Exchange of front plate on UWG4 and UDG4



67845 11/19 (AML)

Read the full instructions carefully before replacing the front plate  
Note that front plates being replaced cannot be expected to be reused.

<p>1</p>  <p>Find the small hole in the bottom of the frame (bottom of thermostat).</p>	<p>2A                      2B</p>  <p>Bend a paper clip or something similar that fits in the hole.</p>
<p>3</p>  <p>Insert the paper clip into the hole.</p>	<p>4</p>  <p>Push the clip until it pops up the front plate.</p>
<p>5</p>  <p>Remove the old front plate.</p>	<p>6</p>  <p>Insert the new front plate and lightly press it into position.</p>